



elliTek, Inc.

## ***Resetting IP Addresses to Default***

Resetting the IloTA™ unit allows the user to return the IP address assignments to the factory settings without compromising existing programs and settings:

1. Power OFF the IloTA™
2. Fully press and HOLD the RESET button
3. Press and RELEASE the POWER button. Ensure the **red** POWER indicator remains illuminated.
4. Continue HOLDING the RESET button for 25 seconds
5. Release RESET button - the IP addresses will be reset to:  
ETH0: 192.168.1.68 / 255.255.255.0  
ETH1: 10.10.10.10 / 255.255.255.0

For additional assistance, please visit [www.IloTA.net](http://www.IloTA.net)  
Technical Support: +1 (865) 409-1555